

DC100 USB-C Mini Dock

| Model Name | HDMI 2.0 | USB-C 3.2 Gen2 | USB-A 3.2 Gen2 |
|------------|----------|----------------|----------------|
| B1400CBA | 0 | 0 | 0 |
| B1402CBA | 0 | 0 | 0 |
| B1500CBA | 0 | 0 | 0 |
| B1502CBA | 0 | 0 | 0 |
| B2402CBA | 0 | 0 | 0 |
| B2402FBA | 0 | 0 | 0 |
| B2502CBA | 0 | 0 | 0 |
| B2502FBA | 0 | 0 | 0 |
| B3402FBA | 0 | 0 | 0 |
| B5302CBA | 0 | 0 | 0 |
| B5302FBA | 0 | 0 | 0 |
| B5402CBA | 0 | 0 | 0 |
| B5402FBA | 0 | 0 | 0 |
| B5602CBA | 0 | 0 | 0 |
| B5602CBN | 0 | 0 | 0 |
| B5602FBA | 0 | 0 | 0 |
| B5602FBN | 0 | 0 | 0 |
| B7402FBA | 0 | 0 | 0 |
| B9400CBA | 0 | 0 | 0 |
| BR1100CKA | 0 | 0 | 0 |
| BR1100FKA | 0 | 0 | 0 |
| CR1100CKA | 0 | 0 | 0 |
| CR1100FKA | 0 | 0 | 0 |
| CX1102CKA | 0 | 0 | 0 |
| CX1102FKA | 0 | 0 | 0 |
| CX1400CKA | 0 | 0 | 0 |
| CX1400FKA | 0 | 0 | 0 |
| CX1500CKA | 0 | 0 | 0 |
| CX1500FKA | 0 | 0 | 0 |
| CX1700CKA | 0 | 0 | 0 |
| CX3401FBA | 0 | 0 | 0 |
| CX3402CBA | 0 | 0 | 0 |
| CX5601FBA | 0 | 0 | 0 |
| L2402CYA | 0 | 0 | 0 |
| L2402FYA | 0 | 0 | 0 |
| L2502CYA | 0 | 0 | 0 |
| L2502FYA | 0 | 0 | 0 |

DC201 Dual 4K USB-C Dock

| Model Name | USB-C1 3.2 Gen2 DP1.4 | USB-C2 3.2 Gen2 PD | USB-A 3.2 Gen2 | HDMI2.1 | RJ45 1GbE |
|------------|-----------------------|--------------------|----------------|---------|-----------|
| B1400CBA | 0 | 0 | 0 | 0 | 0 |
| B1402CBA | 0 | 0 | 0 | 0 | 0 |
| B1402CGA | 0 | 0 | 0 | 0 | 0 |
| B1402CVA | 0 | 0 | 0 | 0 | 0 |
| B1500CBA | 0 | 0 | 0 | 0 | 0 |
| B1502CBA | 0 | 0 | 0 | 0 | 0 |
| B1502CGA | 0 | 0 | 0 | 0 | 0 |
| B1502CVA | 0 | 0 | 0 | 0 | 0 |
| B2402CBA | 0 | 0 | 0 | 0 | 0 |
| B2402CVA | 0 | 0 | 0 | 0 | 0 |
| B2402FBA | 0 | 0 | 0 | 0 | 0 |
| B2402FVA | 0 | 0 | 0 | 0 | 0 |
| B2502CBA | 0 | 0 | 0 | 0 | 0 |
| B2502CVA | 0 | 0 | 0 | 0 | 0 |
| B2502FBA | 0 | 0 | 0 | 0 | 0 |
| B2502FVA | 0 | 0 | 0 | 0 | 0 |
| B3402FBA | 0 | 0 | 0 | 0 | 0 |
| B3402FVA | 0 | 0 | 0 | 0 | 0 |
| B3404CMA | 0 | 0 | 0 | 0 | 0 |
| B3404CVA | 0 | 0 | 0 | 0 | 0 |
| B3404CVF | 0 | 0 | 0 | 0 | 0 |
| B3604CMA | 0 | 0 | 0 | 0 | 0 |
| B3604CVA | 0 | 0 | 0 | 0 | 0 |
| B3604CVF | 0 | 0 | 0 | 0 | 0 |
| B5302CBA | 0 | 0 | 0 | 0 | 0 |
| B5302FBA | 0 | 0 | 0 | 0 | 0 |
| B5402CBA | 0 | 0 | 0 | 0 | 0 |
| B5402CEA | 0 | 0 | 0 | 0 | 0 |
| B5402FBA | 0 | 0 | 0 | 0 | 0 |
| B5402FVA | 0 | 0 | 0 | 0 | 0 |
| B5404CMA | 0 | 0 | 0 | 0 | 0 |
| B5404CVA | 0 | 0 | 0 | 0 | 0 |
| B5404CVF | 0 | 0 | 0 | 0 | 0 |
| B5602CBA | 0 | 0 | 0 | 0 | 0 |
| B5602CBN | 0 | 0 | 0 | 0 | 0 |
| B5602CVA | 0 | 0 | 0 | 0 | 0 |
| B5602CVN | 0 | 0 | 0 | 0 | 0 |
| B5602FBA | 0 | 0 | 0 | 0 | 0 |
| B5602FBN | 0 | 0 | 0 | 0 | 0 |
| B5604CMA | 0 | 0 | 0 | 0 | 0 |
| B5604CVA | 0 | 0 | 0 | 0 | 0 |
| B5604CVF | 0 | 0 | 0 | 0 | 0 |
| B6602FC2 | 0 | 0 | 0 | 0 | 0 |
| B7402FBA | 0 | 0 | 0 | 0 | 0 |
| B9400CBA | 0 | 0 | 0 | 0 | 0 |
| B9403CVA | 0 | 0 | 0 | 0 | 0 |
| BR1102CGA | 0 | 0 | 0 | 0 | 0 |
| BR1102FGA | 0 | 0 | 0 | 0 | 0 |
| BR1104CGA | 0 | 0 | 0 | 0 | 0 |
| BR1104FGA | 0 | 0 | 0 | 0 | 0 |
| BR1204CGA | 0 | 0 | 0 | 0 | 0 |
| BR1204FGA | 0 | 0 | 0 | 0 | 0 |
| BR1402CGA | 0 | 0 | 0 | 0 | 0 |
| BR1402FGA | 0 | 0 | 0 | 0 | 0 |
| CM1402CM2A | 0 | 0 | 0 | 0 | 0 |
| CM1402FM2A | 0 | 0 | 0 | 0 | 0 |
| CM3001DM2A | 0 | 0 | 0 | 0 | 0 |
| CR1100CKA | 0 | 0 | 0 | 0 | 0 |
| CR1100FKA | 0 | 0 | 0 | 0 | 0 |
| CR1102CGA | 0 | 0 | 0 | 0 | 0 |
| CR1102FGA | 0 | 0 | 0 | 0 | 0 |
| CR1104CGA | 0 | 0 | 0 | 0 | 0 |
| CR1104FGA | 0 | 0 | 0 | 0 | 0 |
| CR1204CGA | 0 | 0 | 0 | 0 | 0 |
| CR1204FGA | 0 | 0 | 0 | 0 | 0 |
| CX1102CKA | 0 | 0 | 0 | 0 | 0 |
| CX1102FKA | 0 | 0 | 0 | 0 | 0 |
| CX1400CKA | 0 | 0 | 0 | 0 | 0 |
| CX1400FKA | 0 | 0 | 0 | 0 | 0 |
| CX1500CKA | 0 | 0 | 0 | 0 | 0 |
| CX1500FKA | 0 | 0 | 0 | 0 | 0 |
| CX1700CKA | 0 | 0 | 0 | 0 | 0 |
| CX3401FBA | 0 | 0 | 0 | 0 | 0 |
| CX3402CBA | 0 | 0 | 0 | 0 | 0 |
| CX3402CVA | 0 | 0 | 0 | 0 | 0 |
| CX5403CMA | 0 | 0 | 0 | 0 | 0 |
| CX5601FBA | 0 | 0 | 0 | 0 | 0 |
| CZ1104CM2A | 0 | 0 | 0 | 0 | 0 |
| CZ1104FM2A | 0 | 0 | 0 | 0 | 0 |
| CZ1204CM2A | 0 | 0 | 0 | 0 | 0 |
| CZ1204FM2A | 0 | 0 | 0 | 0 | 0 |

DC300 Triple Display USB-C Dock (Page 1)

| Model Name | HDMI 2.0 | DP 1.4 | USB-C DP 1.4 | USB-C 3.2 Gen2 | USB-A 3.2 Gen2 | USB-A 3.2 Gen1 | RJ45 1GbE | Audio Combo | SD card reader 4.0 | DC Jack(4.5 phi) | PXE | WOL | MAPT | Power button with indicator LED |
|------------|----------|--------|--------------|----------------|----------------|----------------|-----------|-------------|--------------------|------------------|-----|-----|------|---------------------------------|
| B1400CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B1402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B1500CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1502CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B1502CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2502CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2502CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2502FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B2502FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B3402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | X ¹ |
| B3404CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3404CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3404CVF | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3604CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3604CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3604CVF | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5302CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5302FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |

1. The power button of DC300 can't be synchronized with the laptop to turn on both devices simultaneously. Please refer to the individual laptop specifications for full details. Press the power-button can turn on/off LED and open/shut down DC300's display signal.
 2. When connected to non Thunderbolt or display out systems, DC300 will not retain the respective Thunderbolt or display out function.
 This document was last updated on Nov, 2023.

DC300 Triple Display USB-C Dock (Page 2)

| Model Name | HDMI 2.0 | DP 1.4 | USB-C DP 1.4 | USB-C 3.2 Gen2 | USB-A 3.2 Gen2 | USB-A 3.2 Gen1 | RJ45 1GbE | Audio Combo | SD card reader 4.0 | DC Jack(4.5 phi) | PXE | WOL | MAPT | Power button with indicator LED |
|------------|----------|--------|--------------|----------------|----------------|----------------|-----------|-------------|--------------------|------------------|-----|-----|------|---------------------------------|
| B5404CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5404CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5404CVF | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CBN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5602CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5602CVN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5602FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5602FBN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B5604CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5604CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5604CVF | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B7402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B7402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B9400CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| B9403CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| CX3401FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | X ¹ |
| CX3402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | X ¹ |
| CX3402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | X ¹ |
| CX5601FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | X ¹ |
| L2402CYA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| L2402FYA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| L2502CYA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |
| L2502FYA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | X | X | X | 0 |

1. The power button of DC300 can't be synchronized with the laptop to turn on both devices simultaneously. Please refer to the individual laptop specifications for full details. Press the power-button can turn on/off LED and open/shut down DC300's display signal.

2. When connected to non Thunderbolt or display out systems, DC300 will not retain the respective Thunderbolt or display out function.

DC500 Triple 4K TBT 4 Dock

| Model Name | Thunderbolt™ 4 | HDMI 2.1 | SD card reader 4.0 (UHS II) | Micro SD card reader (UHS II) | USB-A 3.2 Gen2 | USB-A 2.0 | RJ45 2.5 GbE | Audio combo jack | DC jack(4.5 phi) | Power button with indicator LED |
|------------|----------------|----------|-----------------------------|-------------------------------|----------------|-----------|--------------|------------------|------------------|---------------------------------|
| B1400CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1402CBA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1402CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1402CVA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1500CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1502CBA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1502CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B1502CVA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2502CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2502CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2502FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B2502FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| B3404CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3404CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3604CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B3604CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5302CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5302FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5404CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5404CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CBN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602CVN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5602FBN | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5604CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B5604CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B7402FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B7402FVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B9400CBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| B9403CVA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1102CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1102FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1104CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1104FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1204CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1204FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1402CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| BR1402FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| CR1102CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CR1102FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CR1104CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CR1104FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CR1204CGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CR1204FGA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CX3401FBA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CX3402CBA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CX3402CVA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CX5403CMA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| CX5601FBA | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | x ¹ |
| L2402CYA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| L2402FYA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| L2502CYA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| L2502FYA | x ² | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

1. Press the power-button can turn on/off DC500. The power button of DC500 can't be synchronized with the laptop to turn on both devices simultaneously. Please refer to the individual laptop specifications for full details.

2. When connected to non Thunderbolt or display out systems, DC500 will not retain the respective Thunderbolt or display out function.

This document was last updated on May, 2024.